

BAFANG BBS Fehlercodes

Error Code displayed in the field for speed display	Error Description	Error-shooting Method
"03"	The braking system has been applied.	Check whether a brake cable is stuck.
"04"	The throttle has not returned home	Check whether the throttle has returned home.
"05"	Throttle fault	Check the throttle.
"06"	Low voltage protection	Check the battery voltage.
"07"	Overvoltage protection	Check the battery voltage.
"08"	Motor hall signal cable fault	Check the motor module.
"09"	Motor phase cable fault	Check the motor module.
"11"	Controller temperature sensor failure	Check the controller.
"12"	Current sensor failure	Check the controller.
"13"	Battery temperature fault	Check the battery.
"21"	External speed-detecting sensor fault	Check the installation position of the external speed-detecting sensor.
"22"	BMS communication failure	Replace the battery.
"30"	Communication failure	Check the controller connectors.